

WHITE MARQUEE

EVENT HIRE

HOT WATER URN

INFORMATION SHEET

Operating Instructions

- Place Urn on a level stable surface within reach of a power point in an accessible position for clear use.
- Fill Urn with water to desired level and fit lid.
- Plug into power point and switch on.
- Rotate the urn control knob to max position and let the water reach boiling point.
- To keep water at a simmering boiling temperature, turn control knob back until the pilot light goes off, this will allow the urn to cycle on and off maintaining water at slightly below boiling point.
- When the urn requires additional water turn the control knob to max and allow contents to boil.

Cleaning

- Ensure the unit is turned off disconnected from power and cool before attempting to clean any part of the machine.
- Wipe exterior with a damp cloth and then dry with soft tea towel.
- Do not use a metal scourer or cleaning agents.
- Never immerse the base, cord or plug in water or any other liquid.

Safety

- Keep out of reach of Children.
- Turn power off when not in use.
- Empty water before attempting to lift or move it.
- Place Urn on a stable level surface.
- **DO NOT** allow the Urn to boil dry.
- **DO NOT** allow cord to touch hot surfaces or hang over table or counter.
- Never place the appliance on or near a hot burner or near materials that can be affected by heat.
- Always plug cord into power outlet before turning any controls on.
- Always turn controls off before removing plug from power outlet.
- **DO NOT** use the appliance for any purpose other than its intended use.
- **DO NOT** overfill. Beware of scalding steam when lifting appliance lid.
- **DO NOT** immerse base in water.

